

Bulletin No. 1104
Issue 1
June, 1941

TELETYPE

PRINTING TELEGRAPH SYSTEMS

PARTS

TRANSLATOR UNIT, RECEIVING DISTRIBUTOR AND PANEL

(MTU-2A *and* 2-B)
(MRD-1E *and* 1F)
(MTUP-2, 4 *and* 5)



December 17, 1945

See EE-506, Issue 1, covering motors listed below.
A copy is filed in Bulletins 1031, Issue 3; 1037, Issue 4
and 1072, Issue 2, respectively.

Standard Motors		Substitute Motors		
<u>Part Number</u>	<u>Model Number</u>	<u>Part Number</u>	<u>Model Number</u>	<u>Illustrated On Page No.</u>
6708	5BA65AA77	107151	S-9058	2
77953	5BA65AA29	104038	S-9050	3
77953	5BA65AA29	106875	S-9057	4
82283	5SH25AB11	83799	S-9005	5
82714	5SH25AB14	104061	S-9049	6

ALPHABETICAL INDEX




<u>TRANSLATOR</u>	<u>Page</u>
Armature Levers	1
Base Plate	3
Cable	3
Cam Sleeve	1
Clutch Lever	2
Contact Levers	2
Contact Mounting Assemblies	2
Gears	1
Magnet Assemblies	1,3
Terminal Strip (Assem.)	3




RECEIVING DISTRIBUTOR




Base Plate	5
Cam Cylinder	4
Condenser and Resistor Bracket (Assem.)	4
Contact Bracket Assemblies	4
Contact Levers	4
Gears	4
Magnet	5
Terminal Strip (Assem.)	5




MOUNTING PANEL

Cable	10
Condenser and Resistor	10
Cover	10
Drive Shaft	6
Gears	6
Governor Parts	8
Governor Speed and Adjusting Bracket (Assem.)	8
Guards	10
Motor - Governed	7
Motor - Synchronous	9
Mounting Panel	6
Pinions - Governed Motor	7
Pinions - Synchronous Motor	9
Resistor Unit (Assem.)	10
Target - 10 Spot	7
Terminal Block (Assem.)	6

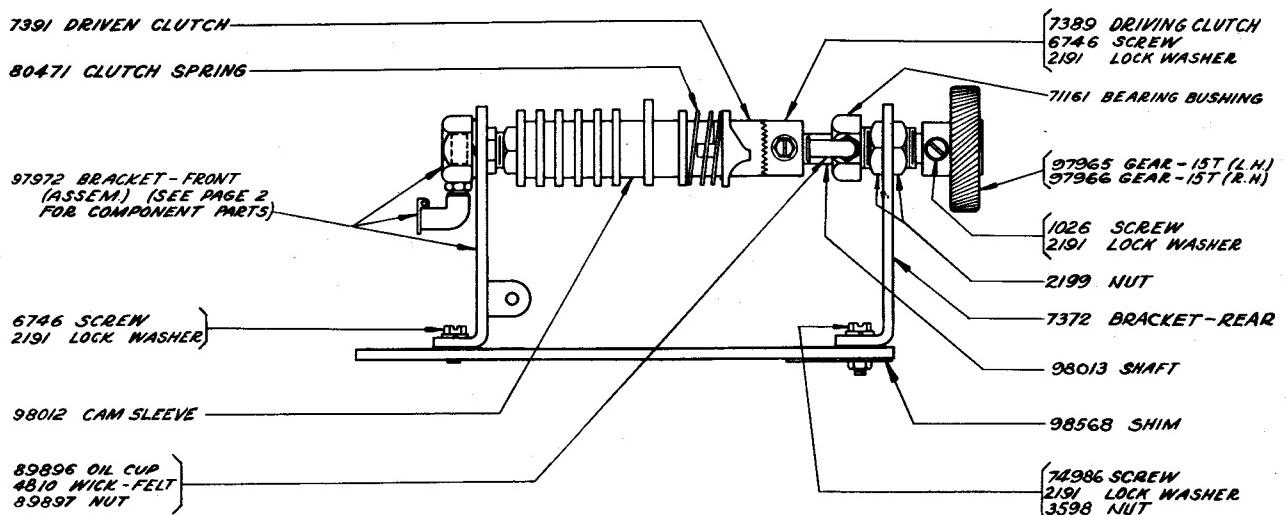
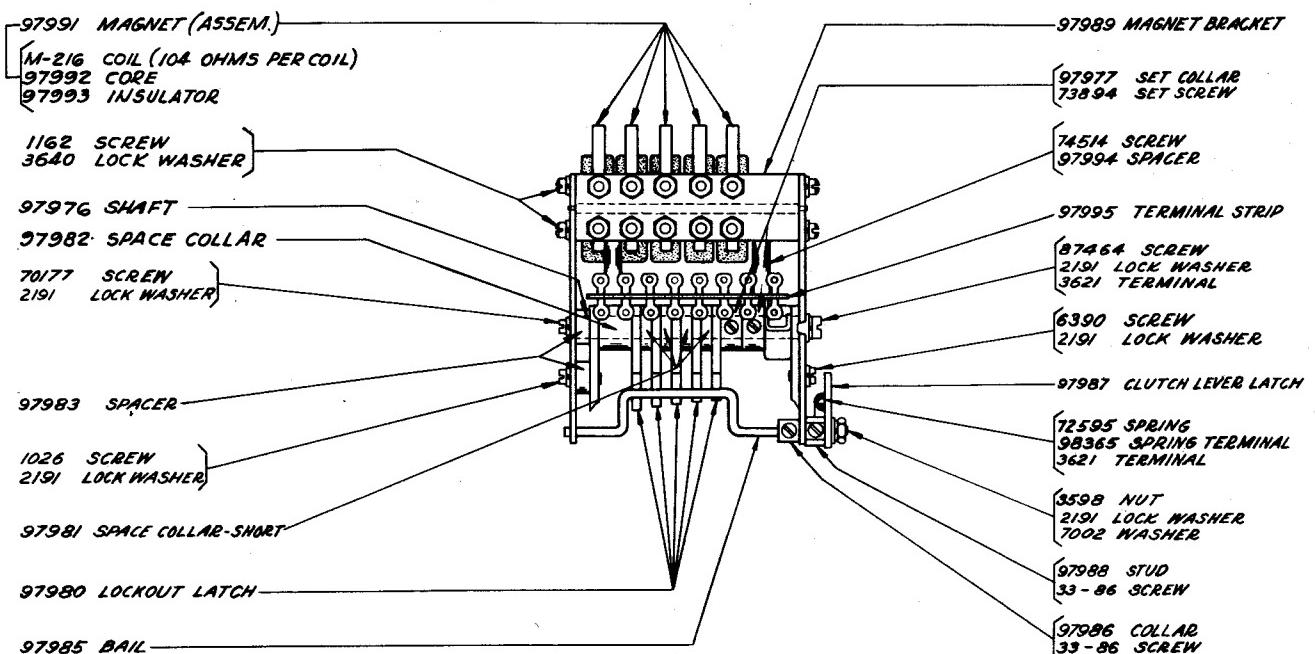
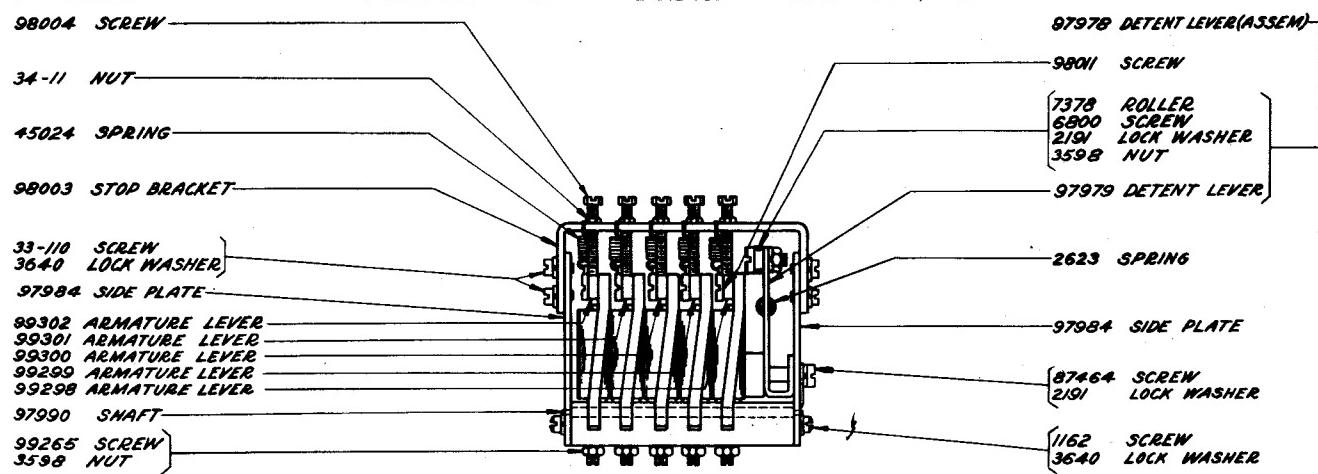


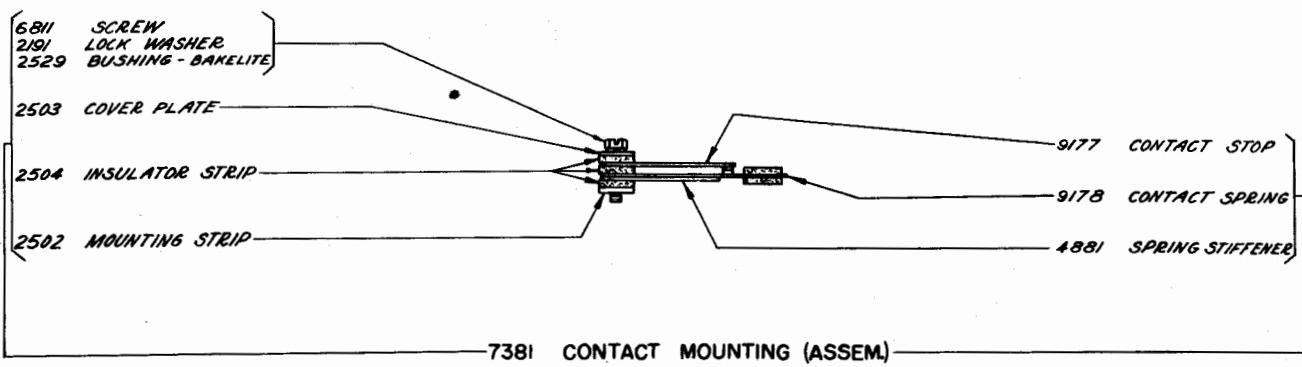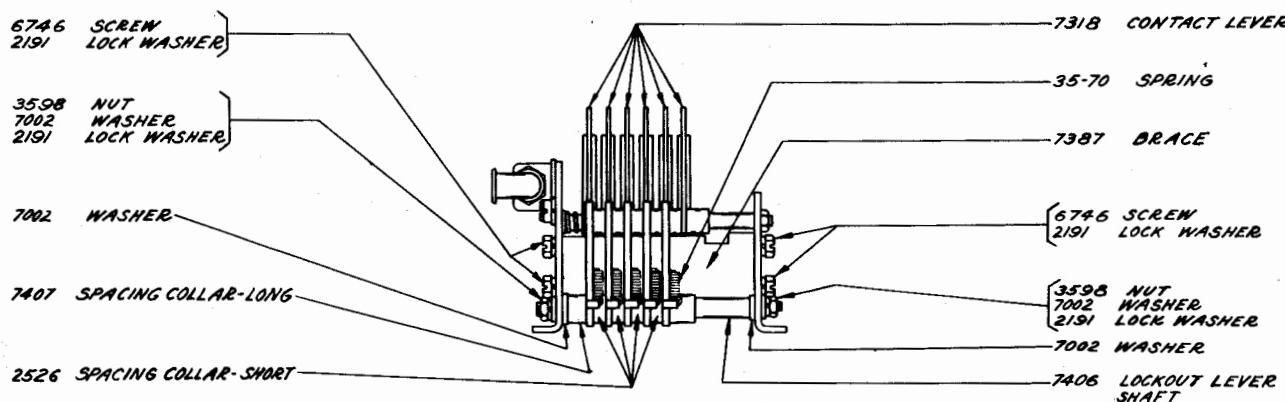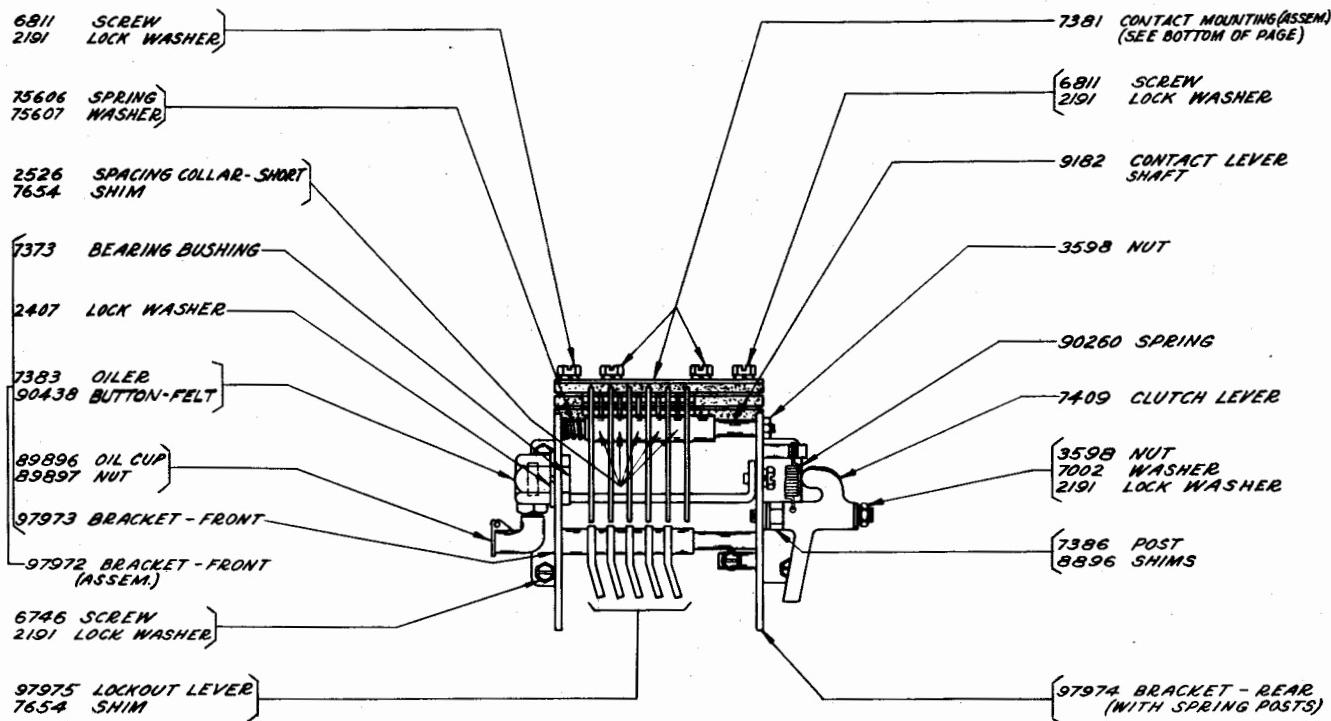


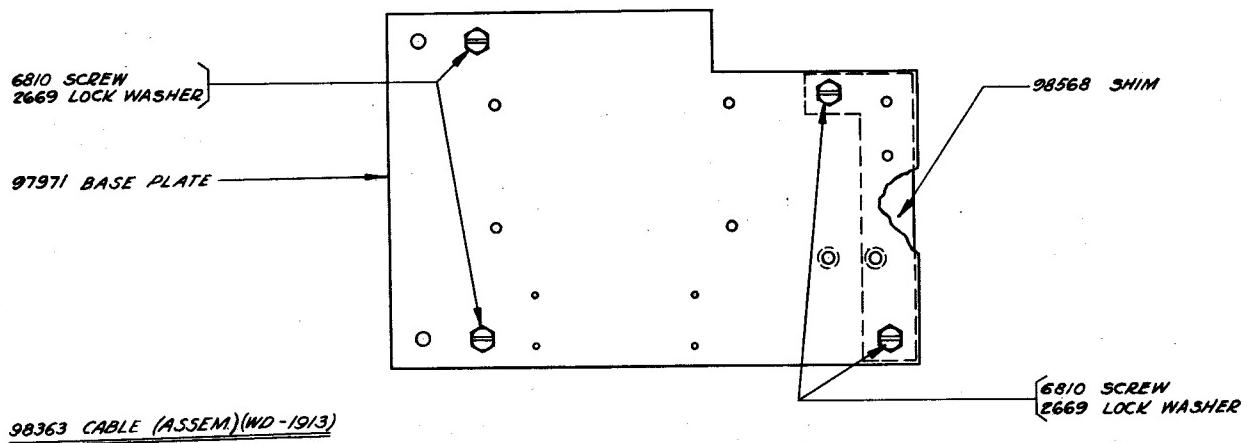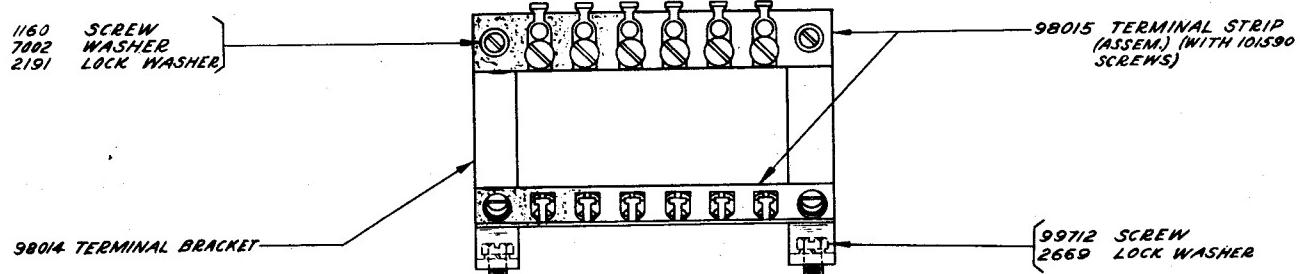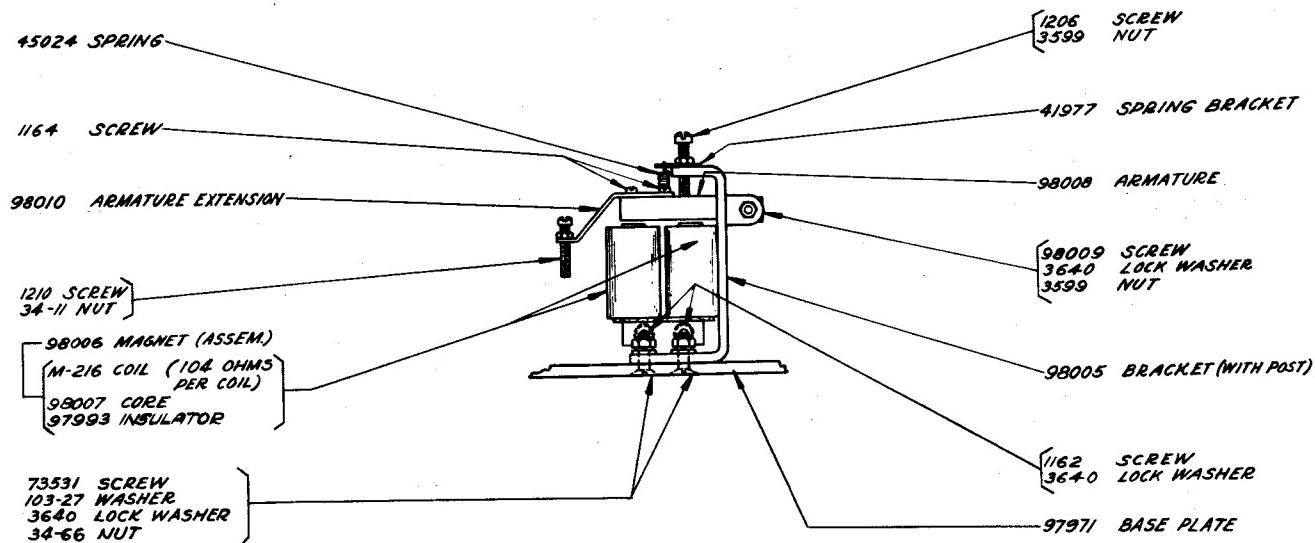

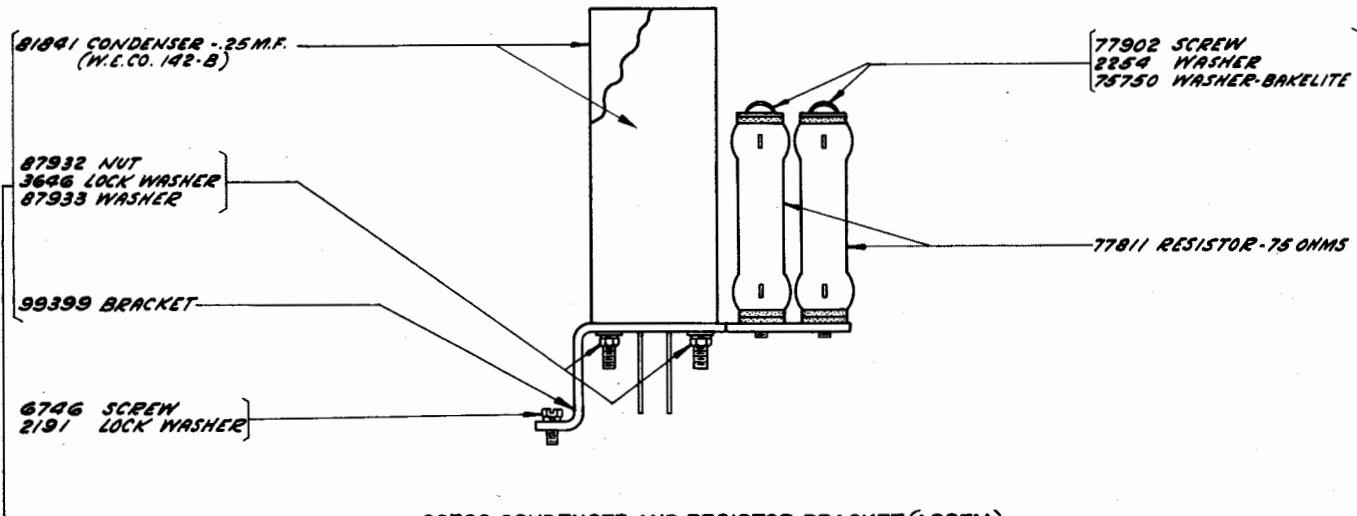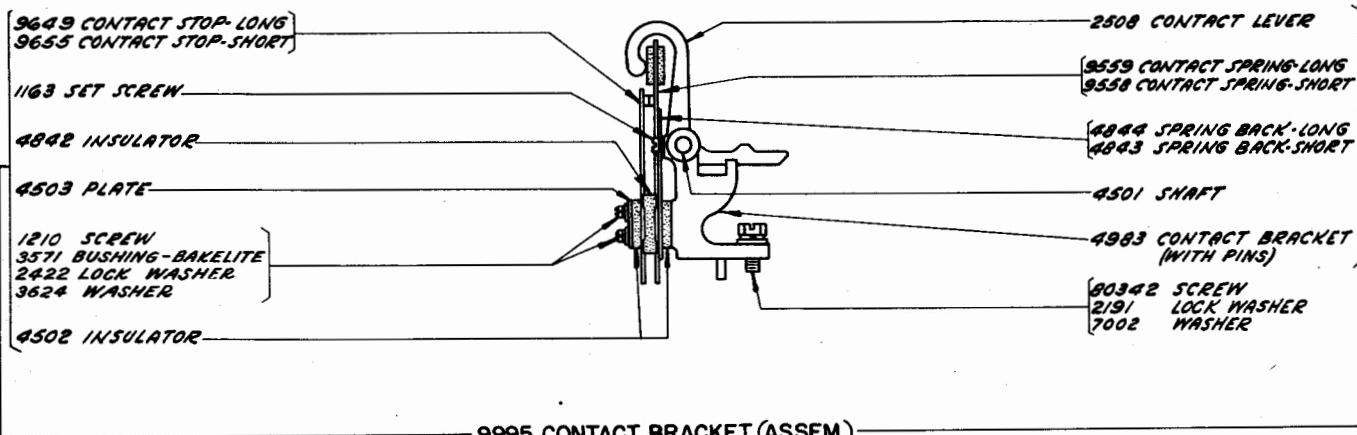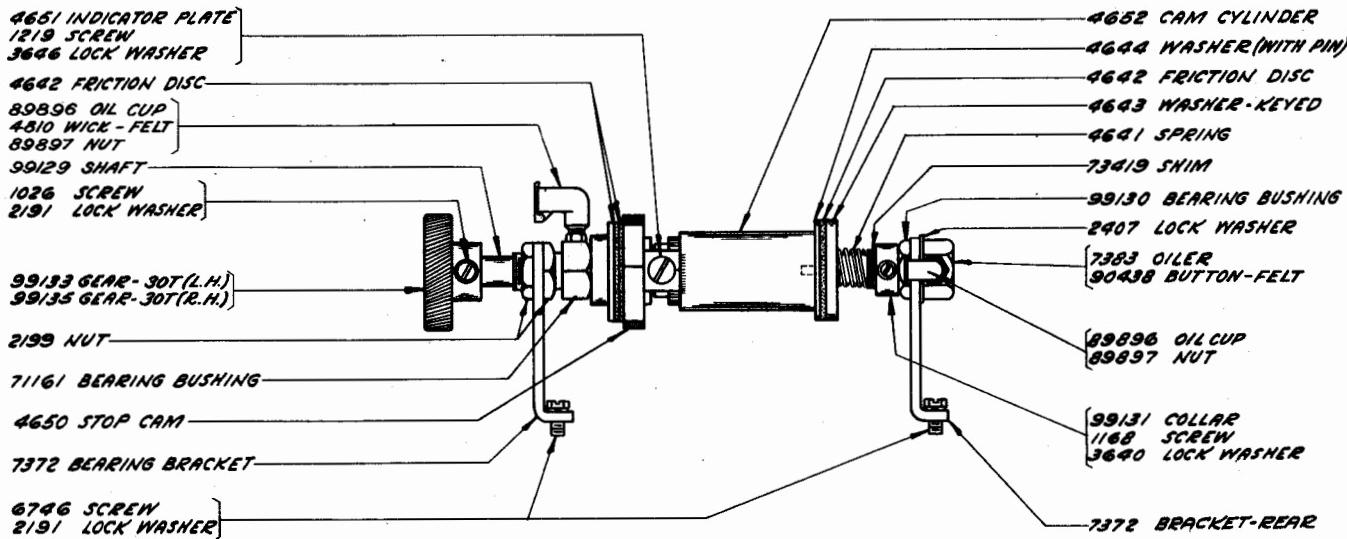


99240 CABLE(W.D.-1952)

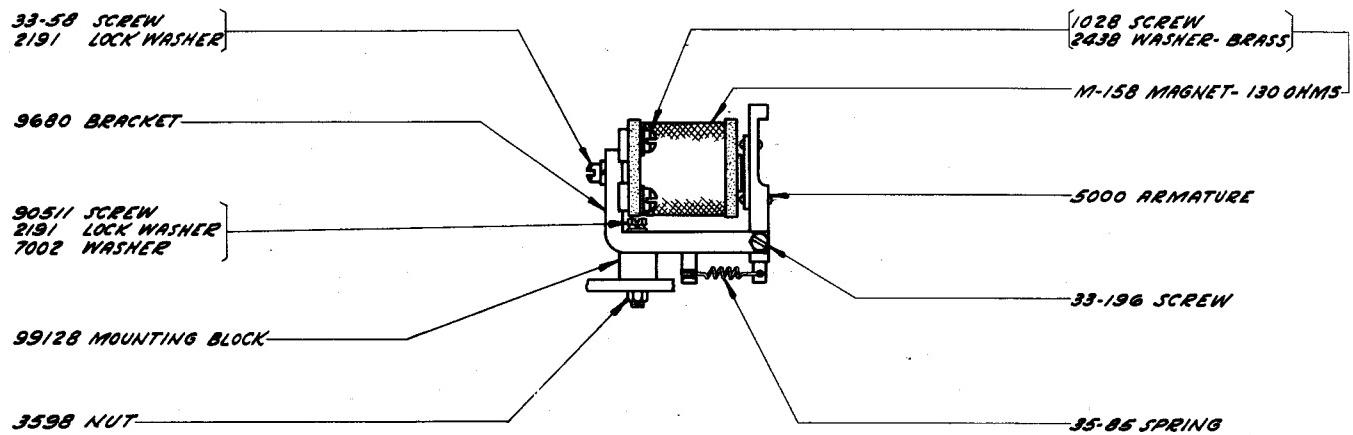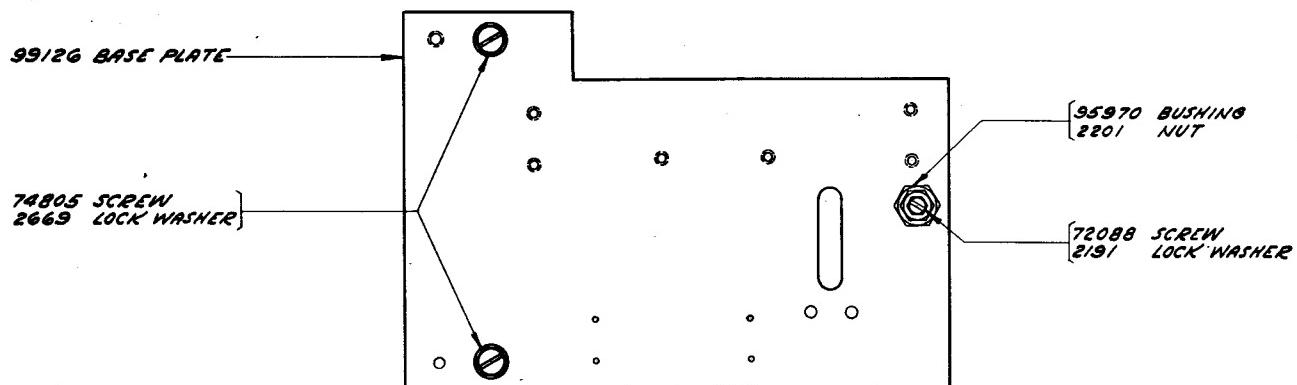
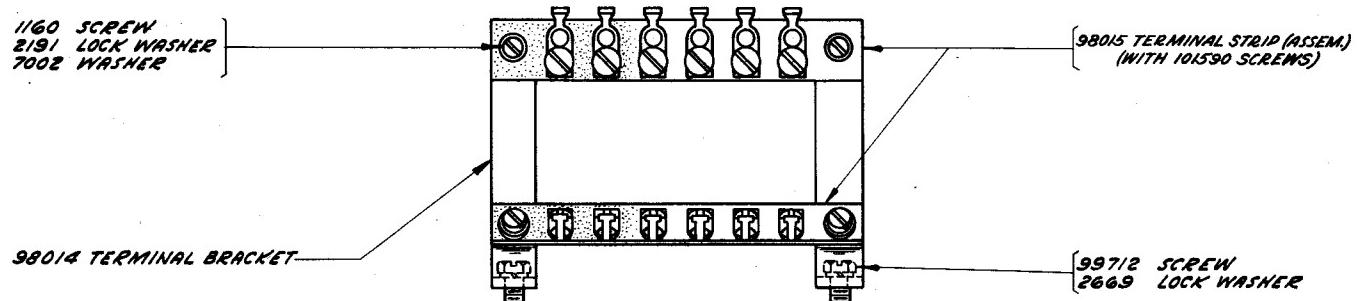


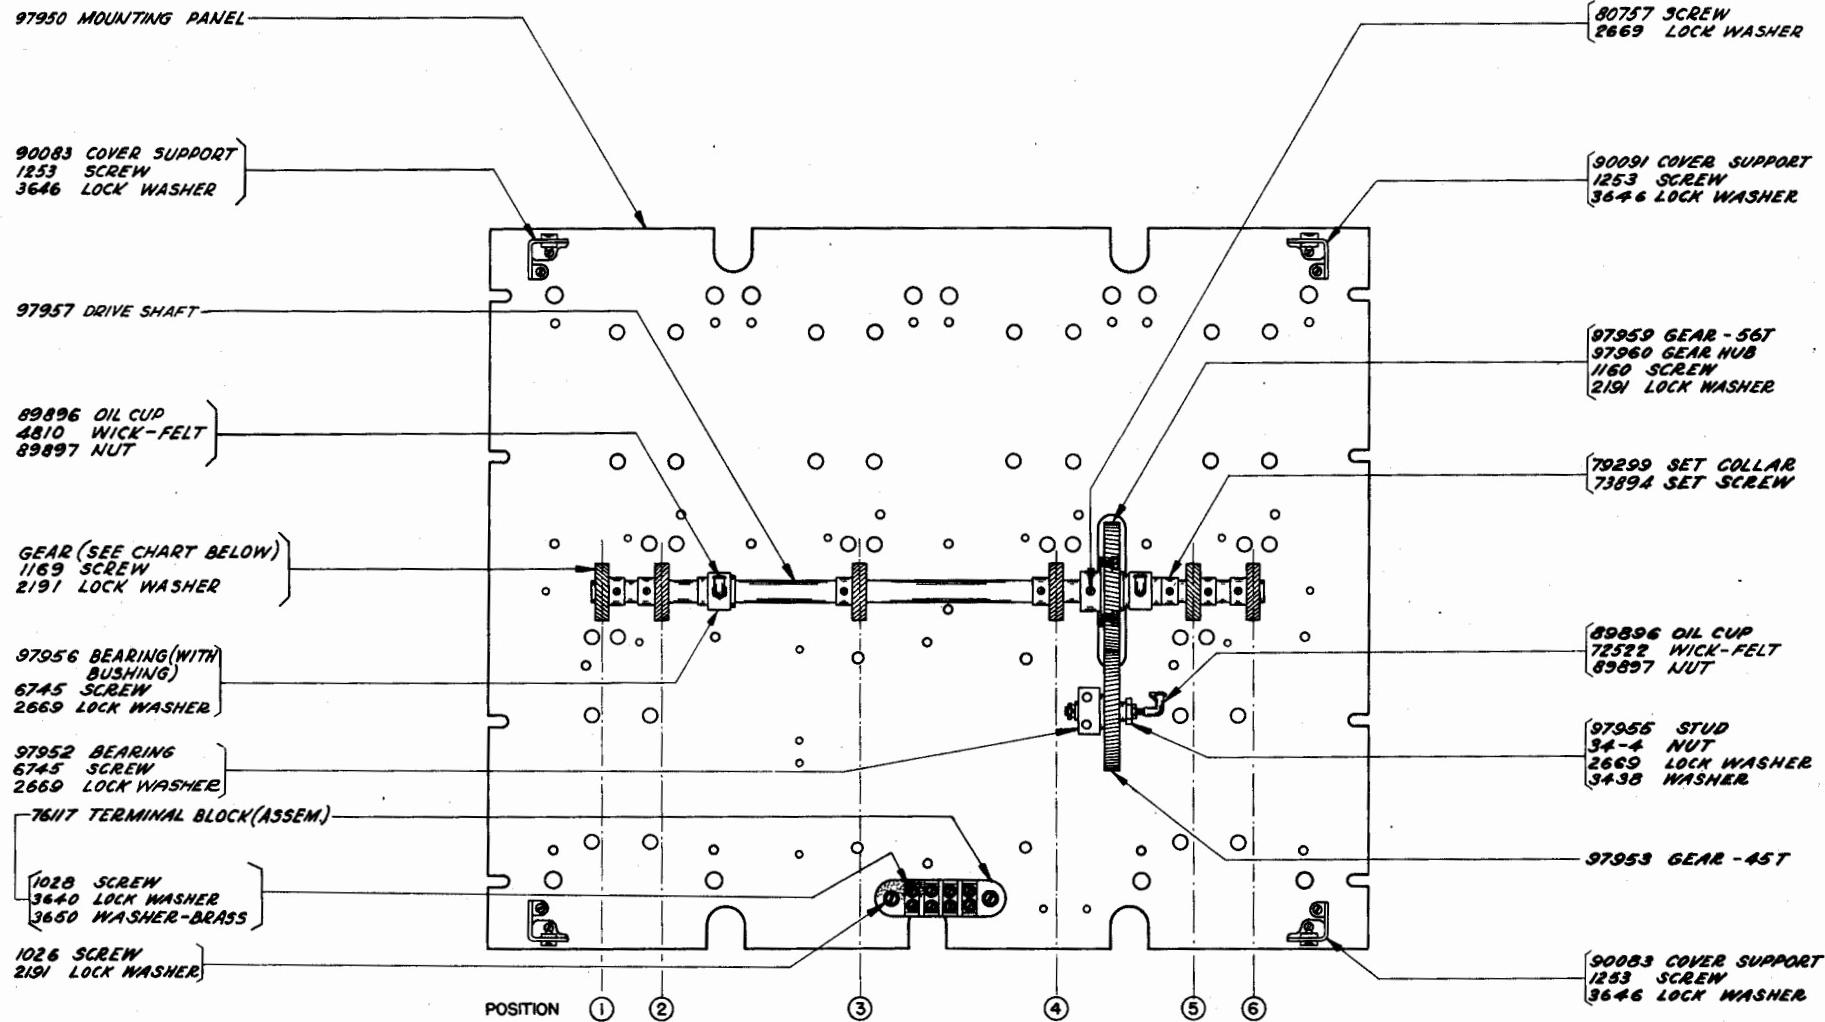


UNIT	POSITION					
	1	2	3	4	5	6
MTUP-2	97964 GEAR 13 T - R.H.	97963 GEAR 13 T - L.H.	97963 GEAR 13 T - L.H.	97963 GEAR 13 T - L.H.	97964 GEAR 13 T - R.H.	97963 GEAR 13 T - L.H.
MTUP-4	99134 GEAR 28 T - R.H.	99132 GEAR 28 T - L.H.	99132 GEAR 28 T - L.H.	97963 GEAR 13 T - L.H.	97964 GEAR 13 T - R.H.	97963 GEAR 13 T - L.H.
MTUP-5	9934 GEAR 28 T - R.H.	99132 GEAR 28 T - L.H.	99132 GEAR 28 T - L.H.	97963 GEAR 13 T - L.H.	97964 GEAR 13 T - R.H.	97963 GEAR 13 T - L.H.




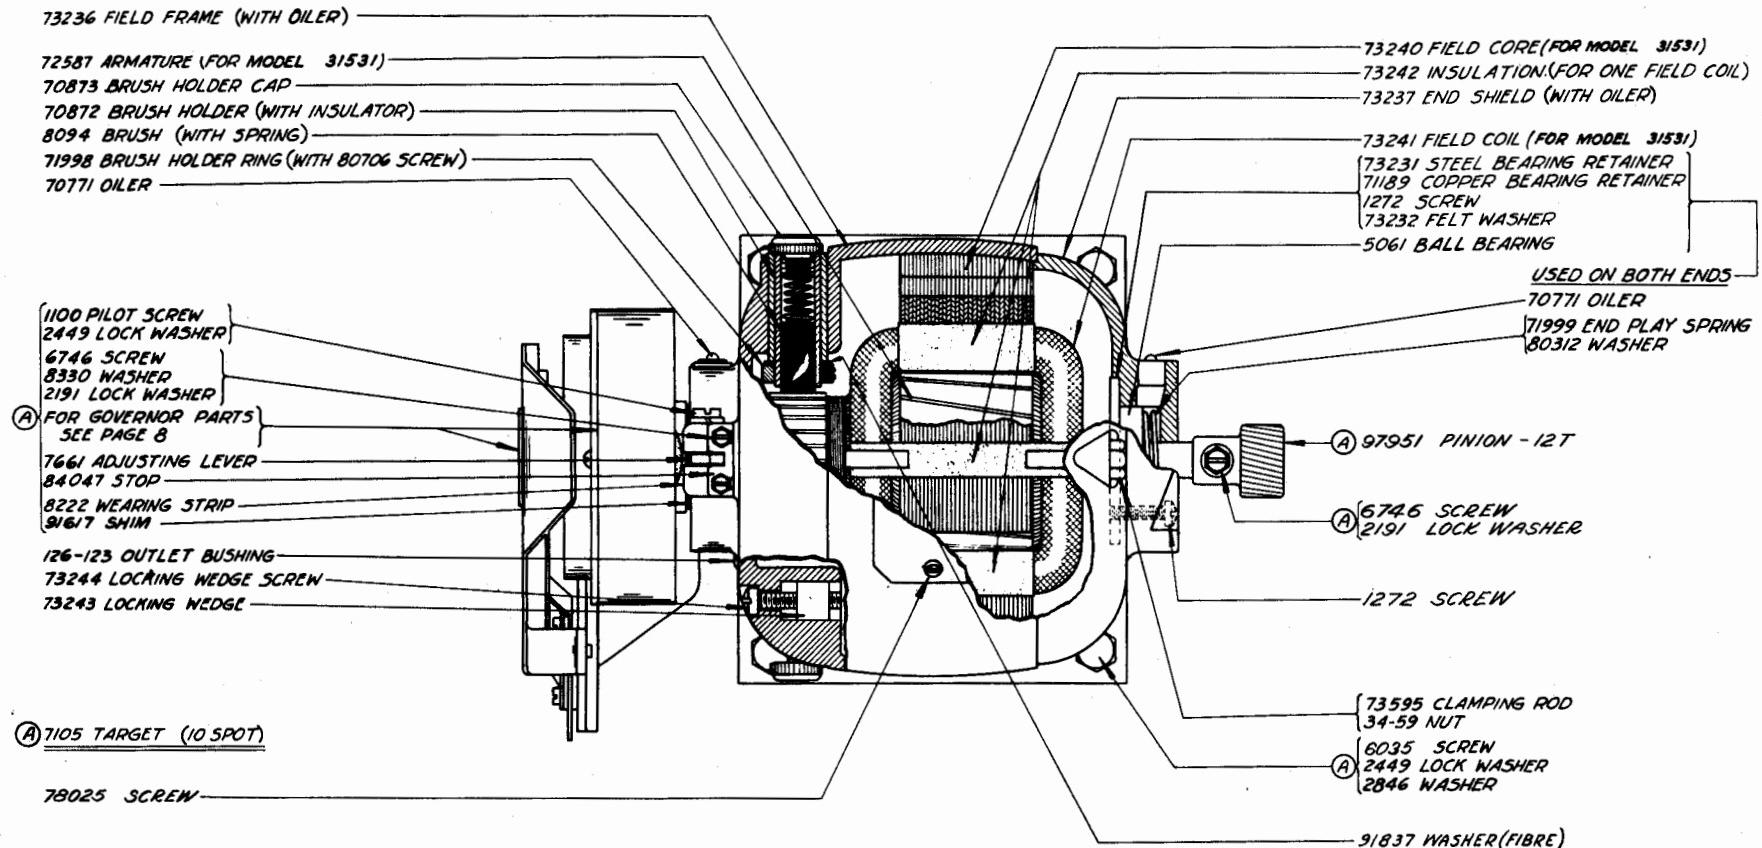


72586 MOTOR, 1/17 H.P., 110 V., D.C. (G.E. MODEL 31531)
 (EXCLUDES PARTS MARKED A)

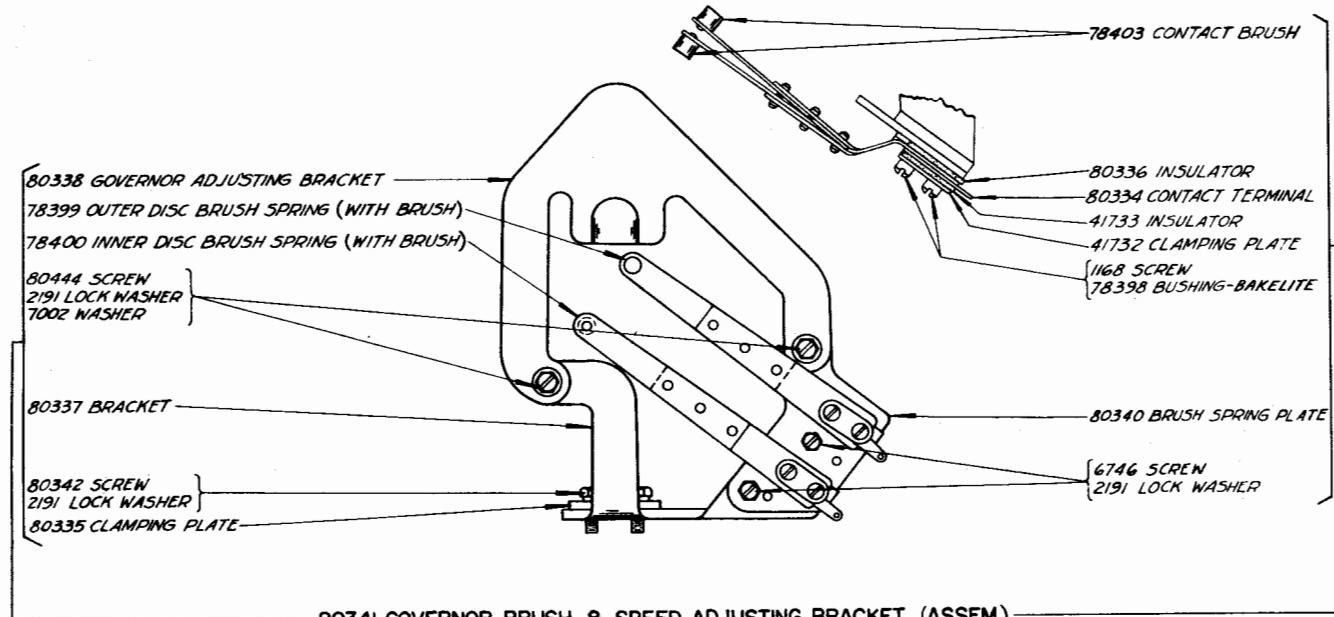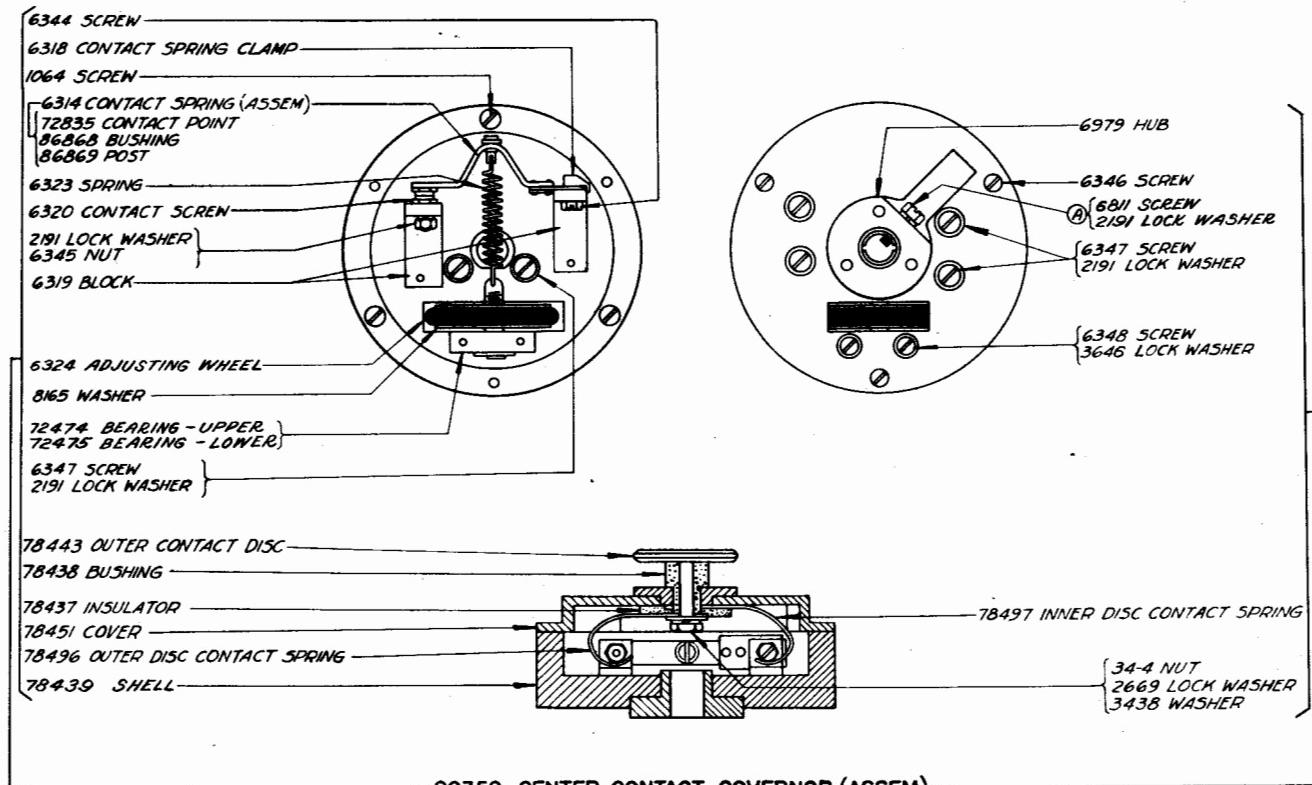

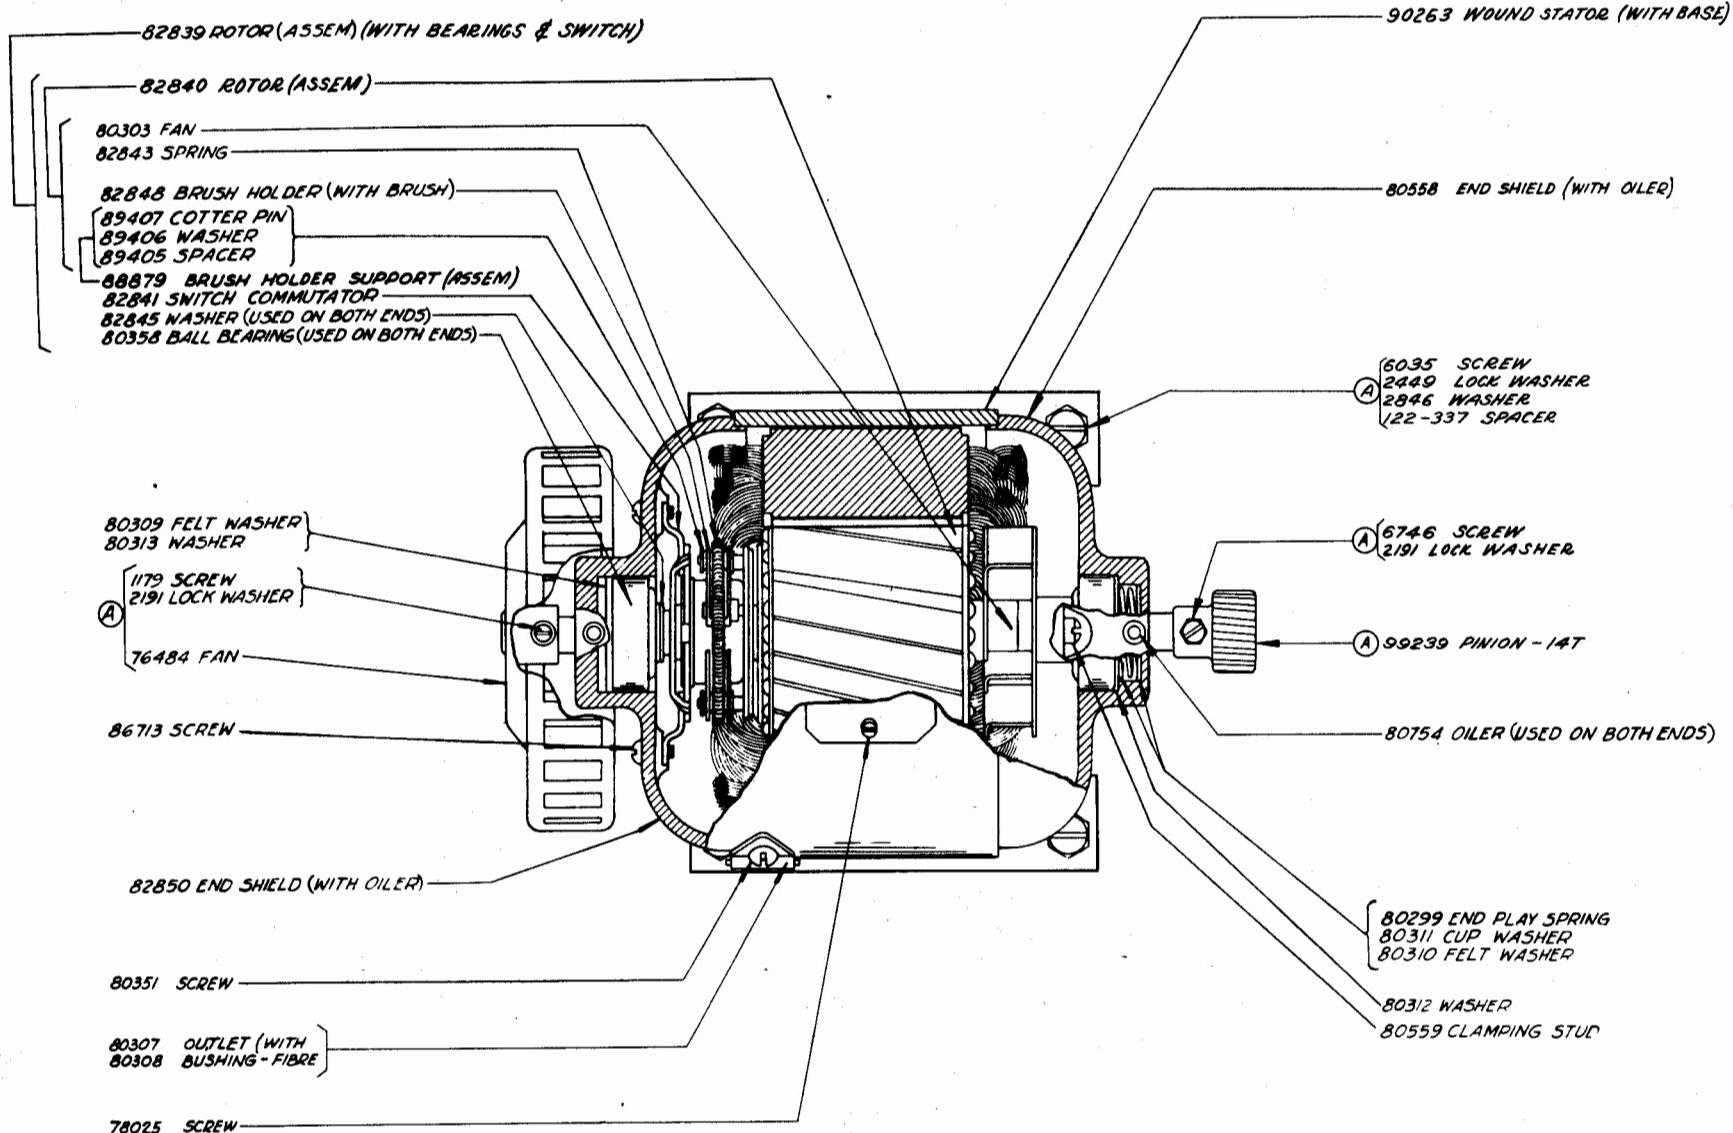

82283 SYNCHRONOUS MOTOR, 1/40 H.P., 110 V., 60 CYCLE A.C. (G.E. MODEL 5SH25ABII)
(EXCLUDES PARTS MARKED **(A)**)

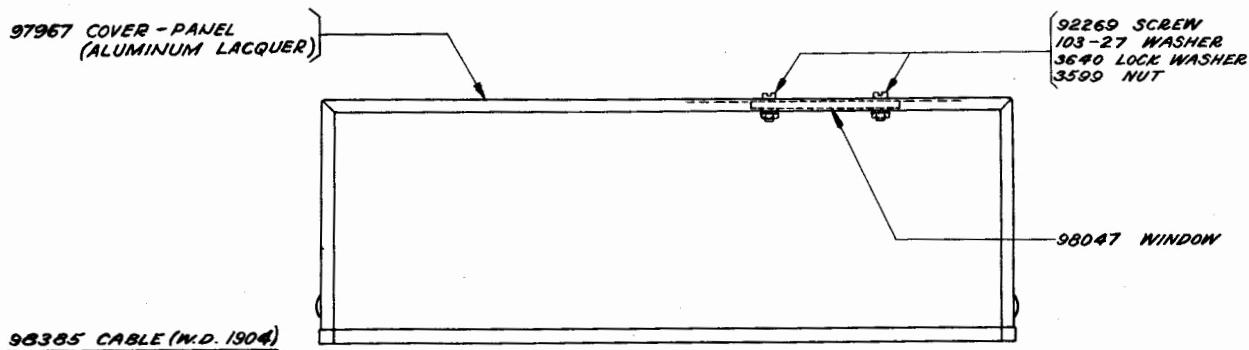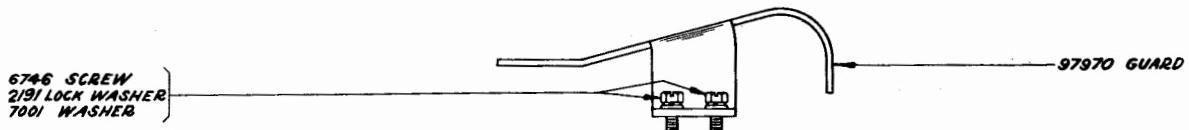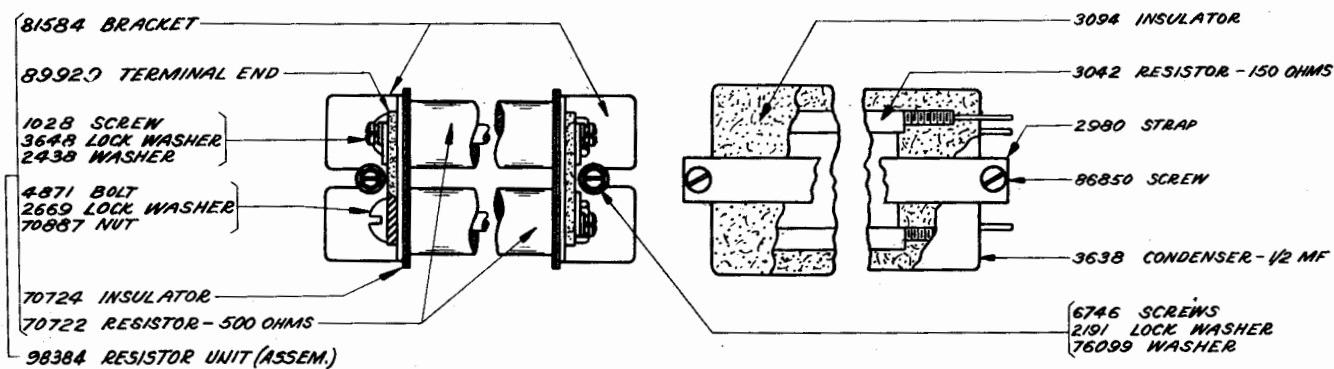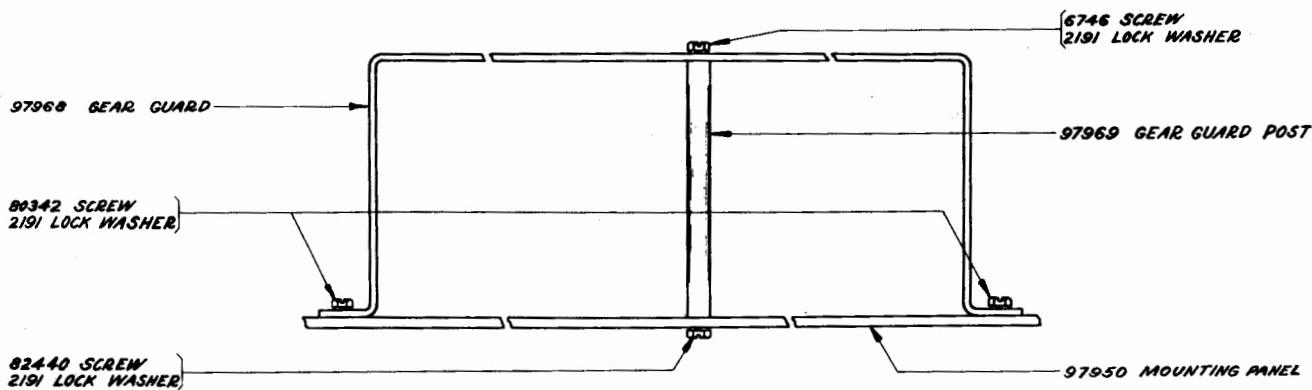

98385 CABLE (W.D. 1904)

NUMERICAL INDEX

33-58	Screw {6-32 x 7/16}, 5	6314	Contact Spring (Assem.), 8	73595	Clamping Rod, 7
33-86	Screw {4-40 x 1/8}, 1	6318	Contact Spring Clamp, 8	73894	Screw {6-40 x 1/8 Set}, 1,
33-110	Screw {4-40 x 3/16}, 1	6319	Block, 8	6	
33-196	Screw {6-40 Special}, 5	6320	Screw {6-32 Contact}, 8	74514	Screw {4-40 x 7/8}, 1
34-4	Nut {10-32 Hex.}, 6, 8	6323	Spring, 8	74805	Screw {10-32 x 3/4}, 5
34-11	Nut {2-56 Hex.}, 1, 3	6324	Adjusting Wheel, 8	74986	Screw {6-40 x 13/32}, 1
34-59	Nut {10-32 Hex.}, 7	6344	Screw {6-32 x 11/32}, 8	75606	Spring, 2
34-66	Nut {4-36 Hex.}, 3	6345	Nut {6-32 Hex.}, 8	75607	Washer, 2
35-70	Spring, 2	6346	Screw {6-32 x 23/32}, 8	75750	Washer - Bakelite, 4
35-85	Spring, 5	6347	Screw {6-32 x 3/8}, 8	76099	Washer, 10
103-27	Washer, 3, 10	6348	Screw {4-36 x 3/4}, 8	76117	Terminal Block (Assem.), 6
122-337	Spacer, 9	6390	Screw {6-40 x 3/16}, 1	76484	Fan, 9
126-123	Outlet Bushing, 7	6745	Screw {10-32 x 1/2}, 6	77811	Resistor - 75 Ohms, 4
M-158	Magnet - 130 Ohms, 5	6746	Screw {6-40 x 5/16}, 1, 2,	77902	Screw {6-40 x 2-3/8}, 4
M-216	Coil (104 Ohms), 1, 3	6800	4, 7, 8, 9, 10	78025	Screw {4-48 x 3/16}, 7, 9
1026	Screw {6-40 x 3/8}, 1, 4,	6810	Screw {6-40 Shoulder}, 1	78398	Bushing - Bakelite, 8
1028	6	6811	Screw {10-32 x 3/8}, 3	78399	Outer Disc Brush Spring
	Screw {4-40 x 1/4}, 5, 6,	6979	Screw {6-40 x 5/8}, 2, 8		(With Brush), 8
	10	7001	Hub, 8	78400	Inner Disc Brush Spring
1100	Screw {1/4-32 Pilot}, 7	7002	Washer, 10		(With Brush), 8
1160	Screw {6-40 x 5/16}, 3, 5,	7105	Washer, 1, 2, 3, 4, 5, 8	78403	Contact Brush, 8
6		7318	Target, 7	78457	Insulator, 8
1162	Screw {4-40 x 1/4}, 1, 3	7372	Contact Lever, 2	78438	Bushing, 8
1163	Screw {4-40 x 5/16}, 4	7373	Bracket - Rear, 1, 4	78439	Shell, 8
1164	Screw {2-56 x 3/16}, 3, 8	7375	Bearing Bushing, 2	78443	Outer Contact Disc, 8
1168	Screw {4-40 x 5/16}, 4, 8	7381	Roller, 1	78451	Cover, 8
1169	Screw {6-40 x 7/16}, 6	7383	Contact Mounting (Assem.), 2	78496	Outer Disc Contact Spring,
1179	Screw {6-40 x 5/8}, 9	7385	Oiler, 2, 4	8	
1206	Screw {4-40 x 9/16}, 3	7386	Post, 2	78497	Inner Disc Contact Spring,
1210	Screw {2-56 x 5/8}, 3, 4	7387	Brace, 2	8	
1219	Screw {8-32 Set}, 4	7389	Driving Clutch, 1	79299	Set Collar, 6
1253	Screw {8-32 x 3/8}, 6	7391	Driven Clutch, 1	80299	End Play Spring, 9
1272	Screw {6-40 x 11/16}, 7	7406	Lockout Lever Shaft, 2	80303	Fan, 9
2191	Lock Washer, 1, 2, 3, 4,	7407	Spacing Collar - Long, 2	80307	Outlet, 9
5, 6, 7, 8, 9, 10		7409	Clutch Lever, 2	80308	Bushing - Fibre, 9
2199	Nut {7/16-32 Hex.}, 1, 4	7654	Shim, 2	80309	Washer - Felt, 9
2201	Nut {5/16-32 Hex.}, 5	7661	Adjusting Lever, 7	80310	Washer - Felt, 9
2254	Washer, 4	8094	Brush (With Spring), 7	80311	Cup Washer, 9
2407	Lock Washer, 2, 4	8165	Washer, 8	80312	Washer, 7, 9
2422	Lock Washer, 4	8222	Wearing Strip, 7	80313	Washer, 9
2438	Washer - Brass, 5, 10	8330	Washer, 7	80334	Contact Terminal, 8
2449	Lock Washer, 7, 9	8896	Shims, 2	80335	Clamping Plate, 8
2502	Mounting Strip, 2	9177	Contact Stop, 2	80336	Insulator, 8
2503	Cover Plate, 2	9178	Contact Spring, 2	80337	Bracket, 8
2504	Insulation Strip, 2	9182	Contact Lever Shaft, 2	80338	Governor Adjusting
2505	Contact Lever, 4	9555	Contact Spring - Short, 4	Bracket, 8	
2526	Spacing Collar - Short, 2	9559	Contact Spring - Long, 4	80340	Brush Spring Plate, 8
2529	Bushing - Bakelite, 2	9649	Contact Stop - Long, 4	80341	Governor Brush and Speed
2623	Spring, 1	9655	Contact Stop - Short, 4	Adjusting Bracket (Assem.),	
2669	Lock Washer, 3, 5, 6, 8,	9680	Bracket, 5	8	
10		9995	Contact Bracket (Assem.), 4	80342	Screw {6-40 x 3/8}, 4, 8,
2846	Washer, 7, 9	41732	Clamping Plate, 8	10	
2980	Strap, 10	41733	Insulator, 8	80351	Screw {8-36 x 5/16}, 9
3042	Resistor - 150 Ohms, 10	41977	Spring Bracket, 3	80352	Center Contact Governor
3094	Insulator, 10	45024	Spring, 1, 3	(Assem.), 8	
3438	Washer, 6, 8	70177	Screw {6-40 Pilot}, 1	80358	
3571	Bushing - Bakelite, 4	70722	Resistor (500 Ohms), 10	80444	Ball Bearing, 9
3598	Nut {6-40 Hex.}, 1, 2, 5	70724	Insulator, 10	80471	Screw {6-40 x 1/4}, 8
3599	Nut {4-40 Hex.}, 3, 10	70771	Oiler, 7	80558	Clutch Spring, 1
3621	Terminal, 1	70872	Brush Holder (With Insulator),	9	End Shield (With Oiler), 9
3624	Washer, 4		7	80559	Clamping Stud, 9
3638	Condenser - 1/2 M.F., 10	70873	Brush Holder Cap, 7	80754	Oiler, 9
3640	Lock Washer, 1, 3, 4, 6,	70887	Nut {3/16-24 Hex.}, 10	80757	Screw {10-32 x 1/2}, 6
10		71161	Bearing Bushing, 1, 4	81584	Bracket, 10
3646	Lock Washer, 4, 6, 8	71189	Copper Bearing Retainer, 7	81841	Condenser - .25 M.F., 4
3648	Lock Washer, 10	71998	Brush Holder Ring (With	82283	Synchronous Motor, 1/40
3650	Washer - Brass, 6	71999	80706 Screw), 7	H.P., 110 V., 60 Cycle	
4501	Shaft, 4	72058	End Play Spring, 7	A.C. (G.E. Model 5SH25AB11),	
4502	Insulator, 4	72474	Screw {6-40 x 1-1/16}, 5	9	
4503	Plate, 4	72475	Bearing - Upper, 8	82440	Screw {6-40 x 7/16}, 10
4641	Spring, 4	72522	Bearing - Lower, 8	82839	Rotor (Assem.) (With
4642	Friction Disc, 4	72586	Wick - Felt, 6	Bearings and Switch), 9	
4643	Washer - Keyed, 4	72587	Motor, 1/17 H.P., 110 V.,	82840	Rotor (Assem.), 9
4644	Washer (With Pin), 4		D.C. (G.E. Model 31531), 7	82841	Switch Commutator, 9
4650	Stop Cam, 4	72595	Armature (For Model 31531), 7	82845	Spring, 9
4651	Indicator Plate, 4	72835	Spring, 1	82848	Washer, 9
4652	Cam Cylinder, 4	73231	Contact Point, 8	82850	Brush Holder (With Brush),
4810	Wick - Felt, 1, 4, 6	73232	Steel Bearing Retainer, 7	9	
4842	Insulator, 4	73236	Washer - Felt, 7	84047	End Shield (With Oiler), 9
4843	Spring Back - Short, 4	73237	Field Frame (With Oiler), 7	86713	Screw {4-48 x 5/16}, 9
4844	Spring Back - Long, 4	73237	End Shield (With Oiler), 7	86850	Screw {10-32 x 1-1/4}, 10
4871	Bolt, 10	73240	Field Core (For Model 31531), 7	86868	Bushing, 8
4881	Spring Stiffener, 2	73241	Field Coil (For Model 31531), 7	86869	Post, 8
4983	Contact Bracket (With	73242	Insulation (For One Field Coil),	87464	Screw {6-40 Pilot}, 1
Pins), 4			7	87932	Nut {8-32 Hex.}, 4
5000	Armature, 5	73243	Locking Wedge, 7	87933	Washer, 4
5061	Ball Bearing, 7	73244	Screw {10-30 x 7/8}, 7	88879	Brush Holder Support
6035	Screw {1/4-20 x 5/8}, 7,	73419	Shim, 4	(Assem.), 9	
9		73531	Screw {4-36 x 3/8}, 3	89405	Spacer, 9

89406	Washer, 9	97971	Base Plate, 3	98011	Screw (4-40 Shoulder), 1
89407	Cotter Pin, 9	97972	Bracket - Front (Assem.), 1, 2	98012	Cam Sleeve, 1
89896	Oil Cup, 1, 2, 4, 6	97973	Bracket - Front, 2	98013	Shaft, 1
89897	Nut (10-32 Hex.), 1, 2, 4, 6	97974	Bracket - Rear (With Spring Posts), 2	98014	Terminal Bracket, 3, 5
89929	Terminal End, 10	97975	Lockout Lever, 2	98015	Terminal Strip (Assem.) (With 101590 Screws), 3, 5
90053	Cover Support, 6	97976	Shaft, 1		
90091	Cover Support, 6	97977	Set Collar, 1	98047	Window, 10
90260	Spring, 2	97978	Detent Lever (Assem.), 1	98363	Cable, 3
90263	Wound Stator (With Base), 9	97979	Detent Lever, 1	98365	Spring Terminal, 1
90438	Button - Felt, 2, 4	97980	Lockout Latch, 1	98384	Resistor Unit (Assem.), 10
90511	Screw (6-40 x 13/16), 5	97981	Space Collar - Short, 1	98385	Cable, 10
91617	Shim, 7	97982	Space Collar, 1	98568	Shim, 1, 3
91837	Washer - Fibre, 7	97983	Spacer, 1	99126	Base Plate, 5
92269	Screw (4-40 x 3/8), 10	97984	Side Plate, 1	99128	Mounting Block, 5
95970	Bushing, 5	97985	Bail, 1	99129	Shaft, 4
97950	Mounting Panel, 6, 10	97986	Collar, 1	99130	Bearing Bushing, 4
97951	Pinion - 12T, 7	97987	Clutch Lever Latch, 1	99131	Collar, 4
97952	Bearing, 6	97988	Stud, 1	99132	Gear - 28T {L.H.}, 6
97953	Gear - 45T, 6	97989	Magnet Bracket, 1	99133	Gear - 30T {L.H.}, 4
97955	Stud, 6	97990	Shaft, 1	99134	Gear - 28T {R.H.}, 6
97956	Bearing (With Bushing), 6	97991	Magnet (Assem.), 1	99135	Gear - 30T {R.H.}, 4
97957	Drive Shaft, 6	97992	Core, 1	99239	Pinion - 14T, 9
97959	Gear - 56T, 6	97993	Insulator, 1, 3	99240	Cable, 5
97960	Gear Hub, 6	97994	Spacer, 1	99265	Screw (6-40 Special), 1
97963	Gear - 13T {L.H.}, 6	97995	Terminal Strip, 1	99298	Armature Lever, 1
97964	Gear - 13T {R.H.}, 6	98003	Stop Bracket, 1	99299	Armature Lever, 1
97965	Gear - 15T {L.H.}, 1	98004	Screw (2-56 x 11/16), 1	99300	Armature Lever, 1
97966	Gear - 15T {R.H.}, 1	98005	Bracket (With Post), 3	99301	Armature Lever, 1
97967	Cover - Panel, 10	98006	Magnet (Assem.), 3	99302	Armature Lever, 1
97968	Gear Guard, 10	98007	Core, 3	99329	Condenser and Resistor
97969	Gear Guard Post, 10	98008	Armature, 3		Bracket (Assem.), 4
97970	Guard, 10	98009	Screw (4-40 Shoulder), 3	99399	Bracket, 4
		98010	Armature Extension, 3	99712	Screw (10-32 x 5/16), 3, 5